



### **Roof Vent Installation Instructions**

- **Remove the screws securing the top and bottom halves of the vent.**
- **Cut a hole in the roof which is the shape of the air chamber containing the directional vents.**
- **Position the lower half of the air vent onto the outside of the roof with the air chamber protruding through the hole into the inside of the car.**
- **Fix vent to roof using screws or rivets.**
- **Seal outside edge of vent to roof to prevent water leakage.**
- **Replace top half of vent.**
- **Connect water drain pipe to a flexible pipe which empties outside of the car.**